


# Thermostat Installation

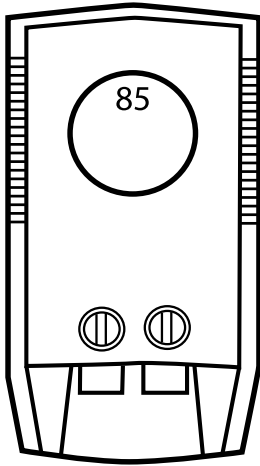



inventivegadgets, inc.  
solidweb • creativeapps • ecommerce

HomeTheaterCooling.com


888-408-3028 | PO Box 1087 | hamilton city ca 95951

## Selecting Location & Measuring


This description shows only one type of cabinet. The steps are the same no matter what type of cabinet or where the fan and thermostats are placed.

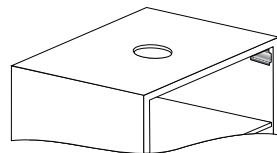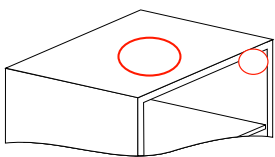


2. Drill or Cut Hole & Mount Thermostat Bracket

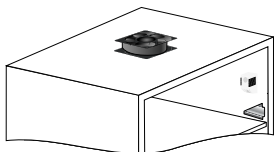


3. Dry Fit Fan & Thermostat for cord measuring

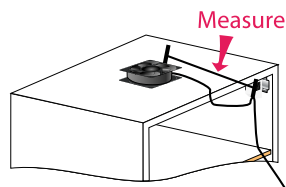


4. Measure and mark distance from fan to thermostat

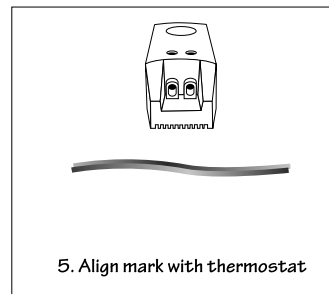


5. Align mark with thermostat

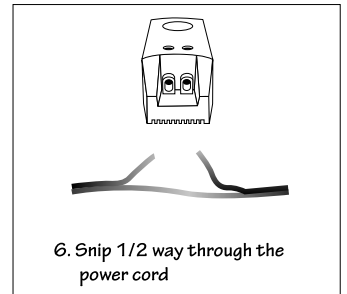


6. Snip 1/2 way through the power cord

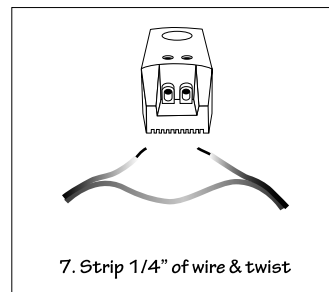


7. Strip 1/4" of wire & twist

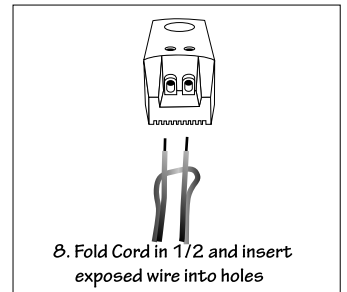

8. Fold Cord in 1/2 and insert exposed wire into holes


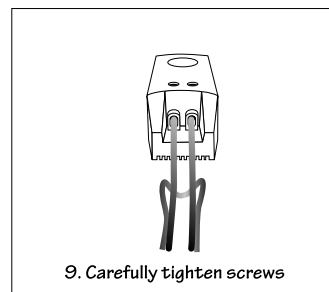


9. Carefully tighten screws

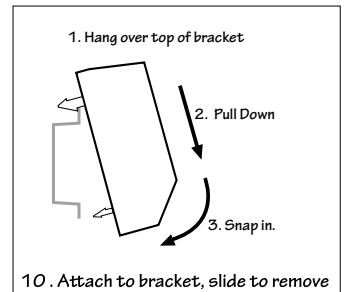

1. Hang over top of bracket  
2. Pull Down  
3. Snap in.  
10. Attach to bracket, slide to remove

Wiring Two PQfans to One Thermostat

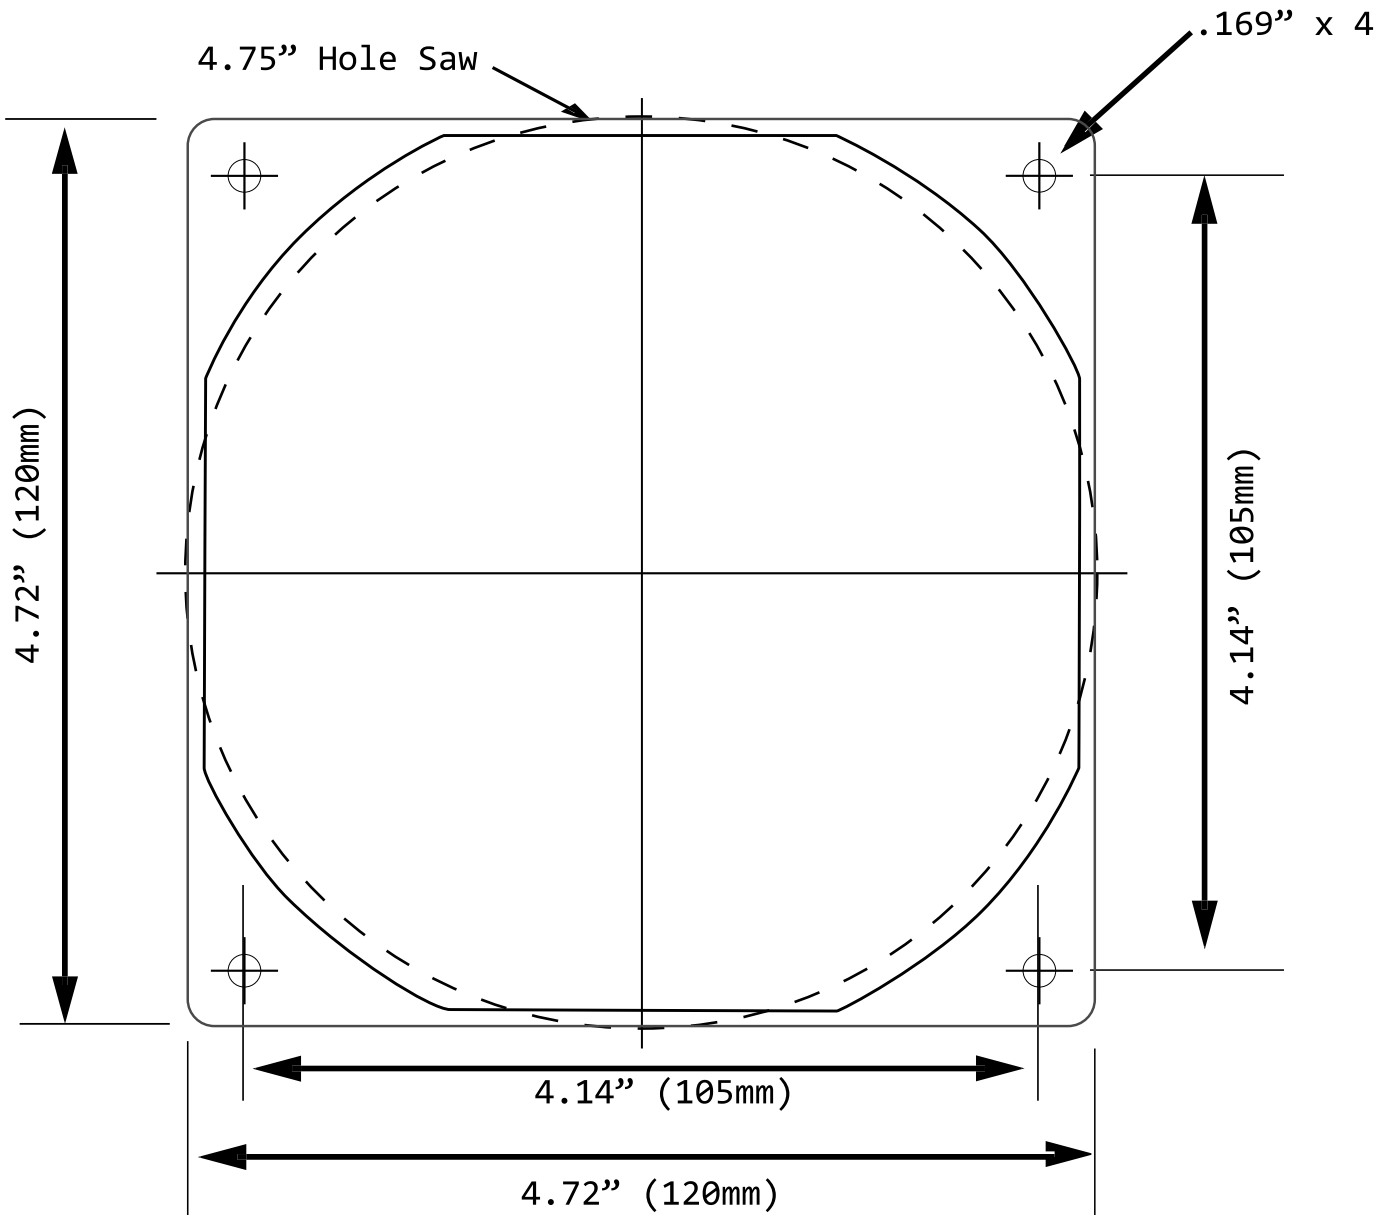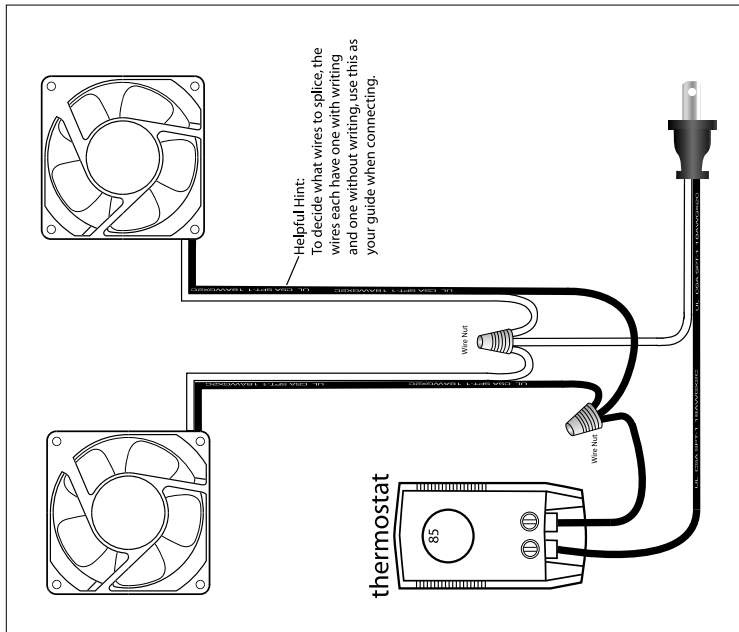

BEFORE CUTTING PRINT SCALE TEST →



← EACH LINE IS 1" APART